

How to Replace the Nozzle on Your AD5X

如何更换您的AD5X喷嘴




Scan for the
installation video



扫二维码
查看安装视频


1. Remove the extruder's front cover.

1. 取下喷头前壳。

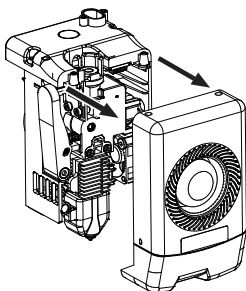


2. Remove the nozzle silicone sock.

2. 再取下喷嘴保温硅胶套。

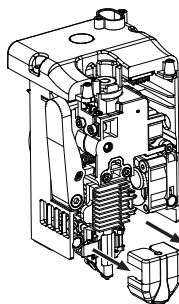


3. Release the heatsink and nozzle clip.

3. 打开散热片和喷嘴卡扣。

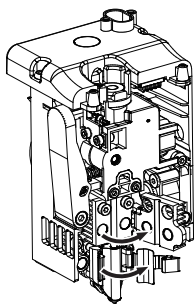


4. Remove the nozzle.

4. 取出喷嘴。

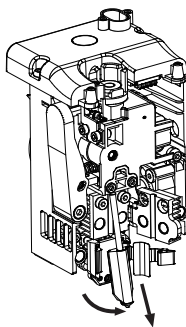


5. Remove the two screws and the heatsink.

5. 取下两颗螺钉和散热片。

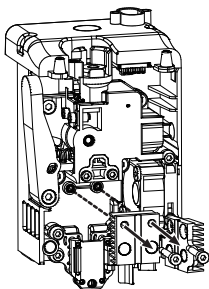


6. Install the new screws and new heatsink.

6. 装入新的螺钉和新的散热片。

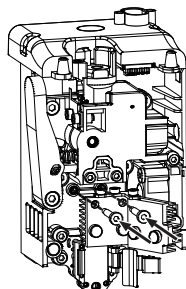


7. Install the new nozzle (0.4mm).

7. 装入新的喷嘴（0.4mm）。

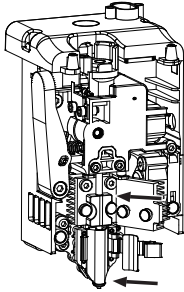


8. Secure the heatsink and nozzle clip.

8. 关合散热片和喷嘴卡扣。

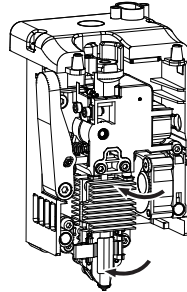


9. Reinstall the nozzle silicone sock.

9. 装回喷嘴保温套。

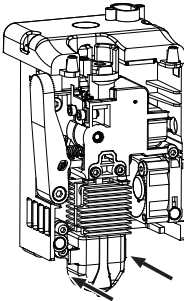

10. Reinstall the extruder's front cover.

10. 装回喷头前壳。

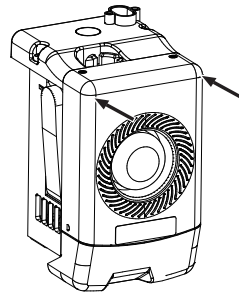

⚠ Notice: After replacing the nozzle, it's crucial to perform a nozzle temperature calibration and bed leveling.

备注: 喷嘴更换完成之后, 需要执行一次喷嘴温度校准以及调平校准。

Zhejiang Flashforge 3D Technology Co., Ltd.

Address: Floors 2-4, Building B, Huaxing Development Building,

No.328 Wen'er Road, Xihu District, Hangzhou City, Zhejiang Province, China

Service: support@flashforge.com | Suggestions and Complaints: mkt2@flashforge.com

Web: flashforge.com | enterprise.flashforge.com

浙江闪铸集团有限公司

地址: 浙江省杭州市西湖区文二路328号华星发展大厦B座2-4楼

服务热线: 400 8866 023 | 建议与投诉: mkt2@flashforge.com | 网址: www.sz3dp.com